American Dish Service™
Manufacturers of Ware Washing Equipment

TECHNICAL SUPPORT MATERIAL

Low-Temp Upright Dish Machines


Delime location change kit #288-1093

Installation of Delime switch to the outside of the control box

NOTE - ALL SERVICE WORK SHOULD BE DONE BY AN AUTHORIZED SERVICE TECHNICIAN.

DANGER When working in the control box or on electrical parts, always disconnect the power and tag-out before servicing. Replace cover to control box and other protective covers when finished servicing this equipment.


1. Components included in the delime switch kit.
   a. 089-9718 (Qty 1)
   b. 087-6454 (Qty 1)
   c. 098-2507 (Qty 2)
   d. 098-1204 (Qty 6)
   e. 098-2201 (Qty 6)
   f. 098-2416 (Qty 2)
   g. 098-1423 (Qty 2)

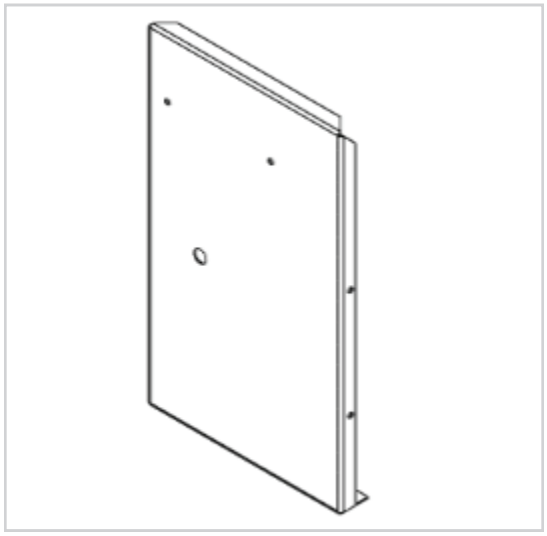

b. 087-6454 Control Box End




a. 089-9718 Decal

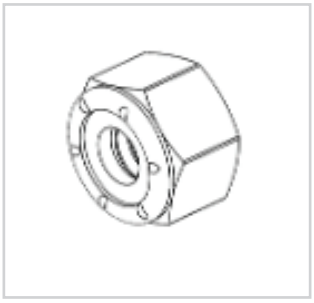


c. 098-2507 Lock nut ¼-20




d. 098-1204 Screw 8-32x1/2"

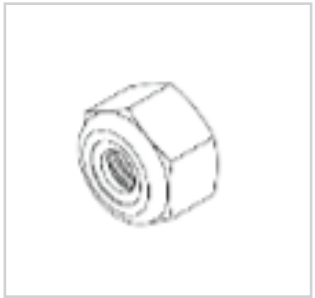

e. 098-2201 Nut 8-32

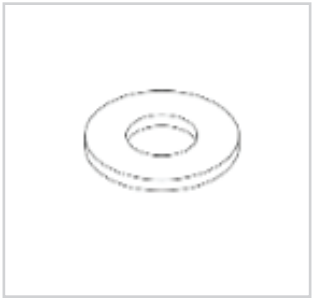



f. 098-2416 Washer

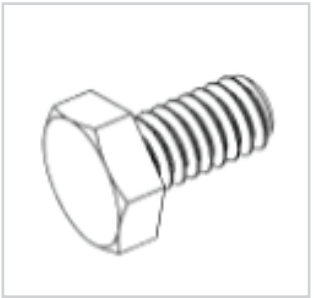

g. 098-1423 Bolt ¼-20x1/2"


2. Replace the control box default left end with delime switch left end.
   a. Remove the 2 nuts (098-2507) and bolts (098-1423) from the leg of the control box.
   b. Remove the 6 nuts (098-2201) and bolts (098-1204) from the main body of the control box.
   c. The left end is now loose and ready to be removed. Always provide support to the base of the control box so that right end doesn't get bent.

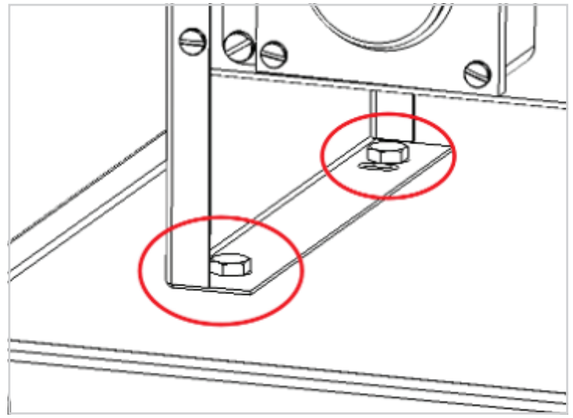

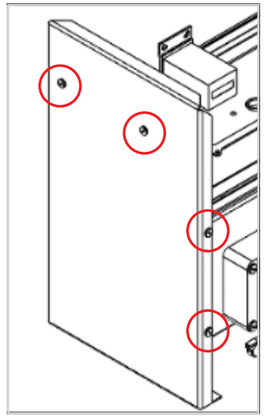


   d. Now replace the existing default left end with the new left end which has a slot for the delime switch.
   e. Complete the assembly by putting all the nuts and bolts back into its place.

3. Moving the delime switch to the outside of the control box.
   a. Remove the delime switch from the control box upper shelf by rotating the nut in counterclockwise direction.

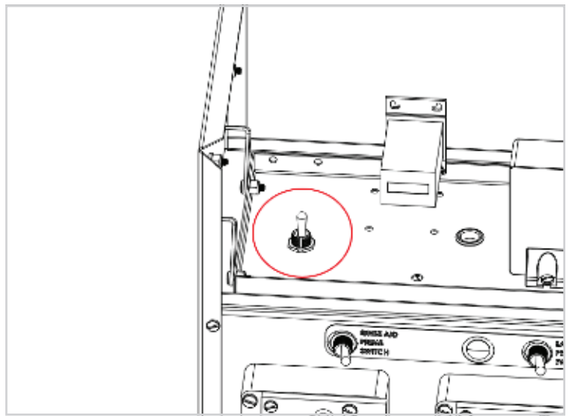

   b. Do not disconnect any wire from the delime switch.
   c. Assemble the delime switch to the new left end which has a slot for the switch.
   d. Check if all the wire connections are tight.
   e. Put the delime sticker (089-9718) below the switch.

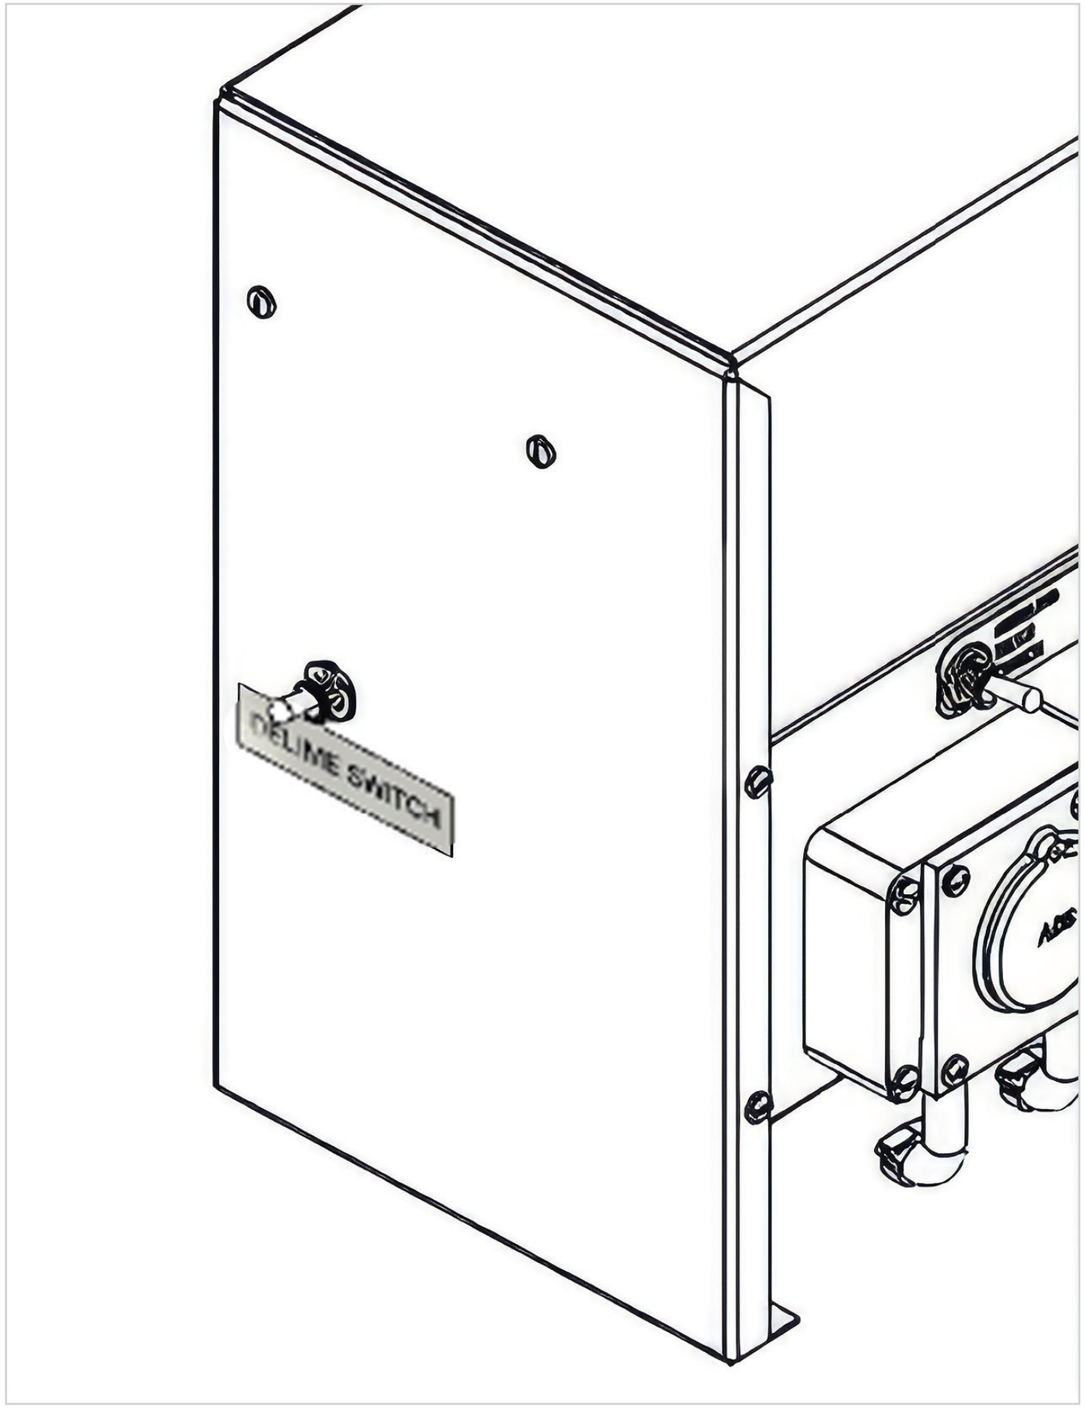

American Dish Service™

Manufacturers of Ware Washing Equipment

American Dish Service

Manufacturer of low and high temperature Commercial Dishwashers and Glasswashers

© American Dish Service

900 Blake Street | Edwardsville, Kansas, 66111
913.422.3700 | Fax: 913.422.6630
orders@americandish.com | **americandish.com**

WELBILT
an ALI Group Company

Rev 1.0