
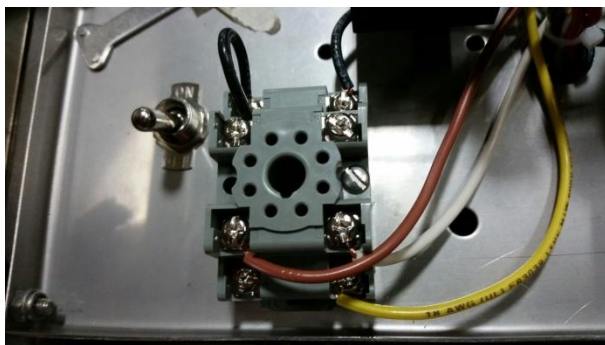


TECHNICAL SUPPORT MATERIAL

Low Temp Dishmachine “Fill Delay Relay” Kit 088-1090

The purpose of this relay is to provide a dwell (pause) in the cam timer rotation during the fill so the machine can fill with water in accounts that have low water pressure. The relay socket is installed in the control box and wired into the existing wire harness.

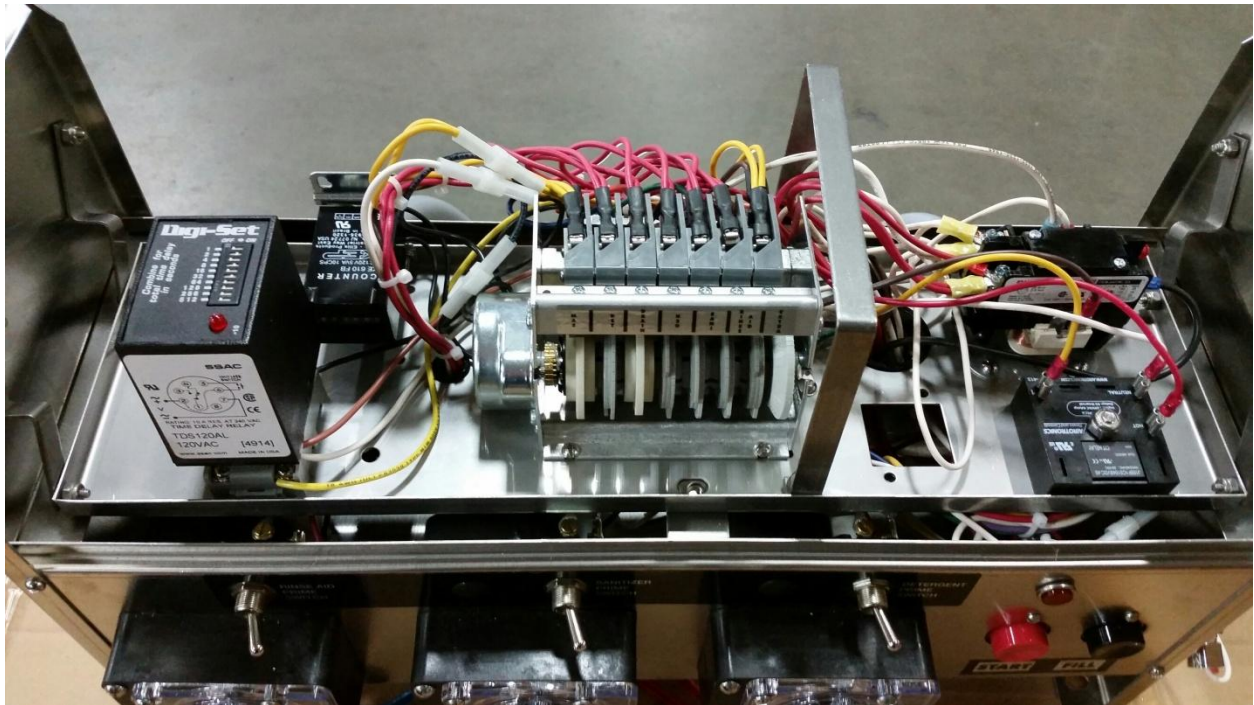

Socket installed as shown in diagram instructions



Wire connections made to the 7th switch on cam timer

INSTALLATION INSTRUCTIONS 088-1090 FILL DELAY RELAY KIT

**NOTE – ALL SERVICE WORK SHOULD BE DONE BY AN
AUTHORIZED SERVICE TECHNICIAN.**

1. Turn off and tag out the power to the dishwasher and verify with a voltmeter. **WARNING – FAILURE TO TURN OFF THE POWER SUPPLY TO THE MACHINE CAN RESULT IN INJURY OR DEATH.**
2. Connect the wires supplied with this kit to the relay socket as follows:
 - Yellow wire to terminal number 1
 - White wire to terminal number 2
 - Black wire to terminal number 4
 - Jumper wire (short black wire) between terminals number 5 & 6
 - Brown wire to terminal number 7
3. Bolt the relay socket to the shelf of the control box. (This may require drilling holes)
4. Plug the relay into the socket.
5. Unplug the yellow wire that is connected to one of the black wires on the timer motor.
6. Connect the yellow wire on terminal number 1 of the new socket to the yellow wire you unplugged in step 5.
7. Connect the black wire on terminal number 4 of the new socket to the black wire on the timer motor that you unplugged in step 5.
8. Connect the white wire on terminal number 2 of the new socket to the white wires on the motor contactor.
9. Connect the brown wire on terminal number 7 of the new socket to the bottom terminal of the motor micro switch (Burp cam) on the timer. (This is the last micro switch on the right as you face the front of the control box. It should already have a yellow wire on the top terminal and a brown wire on the middle terminal.)
10. **VERY IMPORTANT-** The motor cam, sanitizer cam, and rinse aid cam must be adjusted. Move the motor cam so that the micro switch drops down in the notch right after the drain micro switch comes out of the notch. Set the motor cam so that it is only open for one notch. Set the sanitizer and the rinse aid to come on immediately after the motor micro switch comes out of the notch.
11. Determine the amount of additional time needed to fill the machine and move the DIP switches to the on position that will add up to that time. (Example: 1+4+16=21 seconds of delay)

BILL OF MATERIALS
088-1090 FILL DELAY RELAY KIT

1. 1 ea Installation Instructions and diagrams
2. 1 ea 091-3090 Socket, Time Delay Relay
3. 1 ea 091-3089 Relay, Timer Delay
4. 2 ea 098-1106 6-32 X 1 1/8" SS Screw
5. 2 ea 098-2106 6-32 Locknuts
6. 1 ea 18g yellow wire
 - 10" 091-5105 yellow 18g wire
 - 1ea 091-5224 male molex pin
 - 1ea 091-5223 male molex housing
7. 1 ea 18g white wire
 - 16" 091-5108 white 18g wire
 - 1ea 091-5247 1/4" spade connector
8. 1 ea 18g black wire
 - 10" 091-5109 black 18g wire
 - 1ea 091-5222 female molex pin
 - 1ea 091-5221 female molex housing
9. 1 ea 18g black jumper wire
 - 2" 091-5109 black 18g wire
10. 1ea 18g brown wire
 - 10" 091-5104 brown 18g wire
 - 1ea 091-5202 .187 spade connector

